

Operating mode

Programming Mode

Programming mode is accessed by holding the ENT key for 3s. This mode allows the user to access and change all the setting parameters of the board and alarms.


Caution! In order to memorise the programming of all entered changes, hold the **Enter key for at least 5 seconds** after the changes have been made. Then, the pump will automatically start for one cycle.

Key	Function
	Circularly scrolls the parameters downwards Increases the value of a parameter
	Circularly scrolls the parameters upwards Decreases the value of a parameter
	If held for 5+ seconds, saves changes and switches to Operating mode
	Accesses the parameter edit / validates a set parameter and goes back to the overall parameter list.

Menu type selection

Setting Reduced Menu

Hold the key down for 3 seconds to start programming

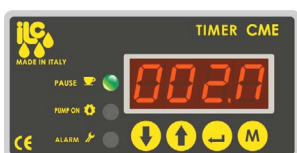


The word E-CM appears with the 2 LEDs flashing on the left.
Press the button



Select CM-b using
Press



E-CM appears. E-CM is now in Reduced Menu mode.

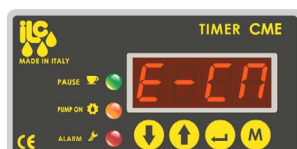

Setting Complete Menu

Hold the key down for 3 seconds to start programming



The word E-CM appears with the 2 LEDs flashing on the left.
Press the button



Select CM-F using
Press



E-CM appears. E--CM is now in Complete Menu mode.



Lube Control Pty Ltd

Providing lubrication solutions!

www.lubecontrol.com.au
sales@lubecontrol.com.au

Australia Wide 1300 917 946
from outside Australia +61 8 8298 5563

Pause and operating Mode setting** (complete and reduced menu)

Pause time in h/m/s (FU-PL) Working time in m/s

From E-CM Press . E-FU appears.
Press .



Select FU.PL using .

Press to confirm and return to E-FU.



From E-FU, press .



E-PM appears. Press .

Set a pause time from 2 to 999 minutes using . Press to confirm.



Press . E-PH appears. Press . Set a time from 0 to 999 hours using . Press to confirm.



Press . E-LS appears. Press . Adjust the operating time in seconds from 3 to a 999 using . Press to confirm.



Press . E-LM appears. Press . Set a working time from 0 to 999 minutes using . Press to confirm.



Select E-CM using .

If the set-up is complete press for 5 seconds.



Pause time in pulses (FU-IL) Working time in m/s

From E-CM Press E-FU appears.
Press .



Select FU.IL using .

Press to confirm and return to E-FU.




From E-FU, press .




E-LS appears. Press . Adjust the operating time in seconds from 30 to a 999 using . Press to confirm.



Press . E-LM appears. Press . Set a working time from 0 to 999 minutes using . Press to confirm.

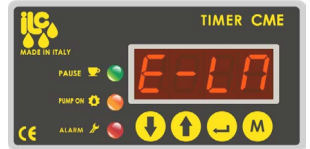


Press . E-IP appears. Press . Set the pause in pulses from 2 to 9999 using . Press to confirm.

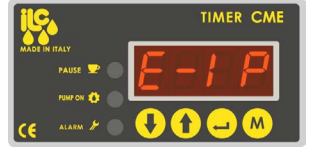

Select E-CM using .

If the set-up is complete press for 5 seconds.

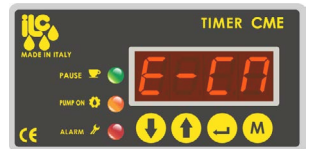

Pause and operating Mode setting** (complete and reduced menu)

Pause time in h/m/s (FU-PL) Working time Cycles

From E-CM Press . E-FU appears
Press .



Select FU.PC using .



Press to confirm and return to E-FU.



From E-FU, press .
E-PM appears. Press .



Set a pause time from 2 to 999 minutes
using . Press to confirm.



Press . E-PH appears. Press . Set
a time from 0 to 999 hours using .



Press to confirm.
Select with
01-16 Cycles span
17-32 Cycles span
33-48 Cycles span
Press to confirm.



E-CS Appears. Press .




E-CL Appears. Press .




Set the value of the selected Cycle span with
 . Press to confirm.



E-CL Appears. Press . (Follows in the
next column of this page)

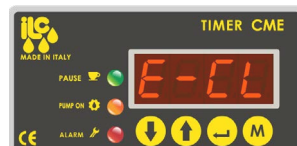

E-CT Appears (Cycle control). Press .

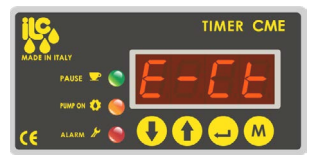

Set the Cycle control time from 2 to 3000
seconds with . Press to confirm.



E-CT Appears (Cycle control). Press .



E-CM appears. If the set-up is complete,
press for 5 seconds.



Advanced programming (complete menu only)

Enable/Disable Extra Cycle

Start from E-CM. (complete menu mode)



Select E-AE using $\uparrow \downarrow$
Press M




Select with $\uparrow \downarrow$
AE-0 reset/extra cycle not enabled
AE-1 reset/extra cycle enabled
Press M to confirm.



Pre-lubrication enabling

Start from E-CM. (complete menu mode)

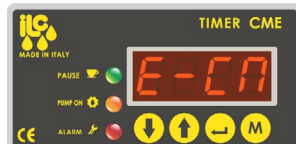

Select E-PL using $\uparrow \downarrow$
Press M




Select with $\uparrow \downarrow$
PL-0 memory
PL-1 restart from working time
Press M to confirm.



Enable/Disable Overpressure Alarm

Start from E-CM. (complete menu mode)

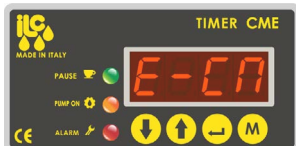

Select E-AP using $\uparrow \downarrow$
Press M



Select with $\uparrow \downarrow$
AP-0 off
AP-1 on
Press M to confirm.




In the event of an alarm, the display will show 1.1AL. This alarm does not block the pump if triggered.



Enable/Disable Cycle Alarm

Start from E-CM. (complete menu mode)

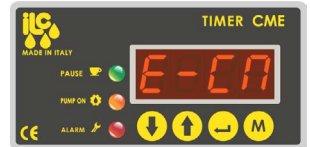


Select E-AC using $\uparrow \downarrow$
Press M



Select with $\uparrow \downarrow$
AC-0 cycle alarm not enabled
AC-1 cycle alarm enabled
Press M to confirm.




In the event of an alarm, the display will show bloc. This alarm blocks the pump if triggered.

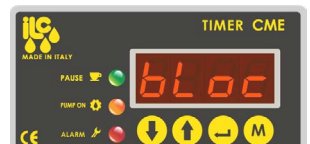

Enable/Disable Low Level Alarm

Start from E-CM. (complete menu mode)

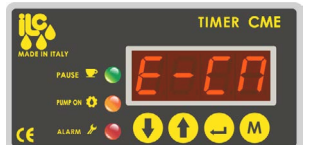

Select E-AL using $\uparrow \downarrow$
Press M



Select with $\uparrow \downarrow$
AL-0 alarm not enabled
AL-1 alarm enabled
Press M to confirm.



In the event of an alarm, the display will show 1.1AL. This alarm does not block the pump if triggered.



Level alarm enabling

Start from E-CM. (complete menu mode)



Select E-AL using
 Press



Select with
 AL-0 alarm not enabled
 AL-1 alarm enabled
 Press to confirm.



In the event of an alarm, the display will show 1.1AL. This alarm does not block the pump if triggered.



Lube Control Pty Ltd

Providing lubrication solutions!

www.lubecontrol.com.au
sales@lubecontrol.com.au

Australia Wide 1300 917 946
 from outside Australia +61 8 8298 5563